

A close-up, artistic photograph of a Lexus car's exterior. The image focuses on the sleek, metallic lines of the door handle and the window frame. The lighting is dramatic, highlighting the car's curves and the texture of the paint. The background is dark and out of focus, emphasizing the car's design.

# LEXUS EXTRA CARE – GOLD

**VEHICLE SERVICE AGREEMENT**

*offered by*

LEXUS FINANCIAL SERVICES





DRIVE WITH CONFIDENCE KNOWING YOU ARE PROTECTED  
BY LEXUS EXTRA CARE.

**Lexus Extra Care, designed with you in mind.**

Let Lexus Extra Care simplify the unexpected events in life. We have crafted a protection plan that conveniently fits your needs and can help insulate you from surprise services. We know your Lexus is more than just a vehicle and that is why we want to help you protect it. Keep your luxury vehicle protected with a plan built for you.

**Benefits and Peace of Mind:**

- Protection after your Lexus warranty expires<sup>1</sup>
- Repairs using Lexus-approved parts, performed by factory-trained technicians keeping your Lexus at peak performance
- 24/7 roadside assistance<sup>2</sup>
- Deductible Options<sup>4</sup>

**Smart. Simple. Exceptional. For more information, contact your Lexus dealer.**



# LEXUS EXTRA CARE — GOLD VSA

Gold VSA covers the cost of mechanical breakdown of the components listed below in BLUE and BLACK text after your vehicle's warranty expires.<sup>5</sup> Your vehicle's Limited Powertrain Warranty covers only those components listed in BLUE text only.

## ENGINE

All internally lubricated components and: Balance Shaft; Camshaft; Crankshaft; Crankshaft Pulley; Cylinder Heads; Engine Block; Engine Mounts; Engine Oil Reservoir; Engine Oil Reservoir Pump; Equipment Drive Shaft; Exhaust Manifolds; Flexplate; Flywheel; Idler Pulley; Intake Manifold; Oil Pan; Oil Pressure Switch; Oil Pump; Oil Sending Unit; Piston; Seals and Gaskets; Supercharger; Supercharger Intercooler; Tensioners; Timing Belt; Timing Chain; Timing Cover; Timing Gears; Turbo Intercooler; Turbo Wastegate; Turbocharger; Valve Covers; Water Pump

## MANUAL TRANSMISSION

Transfer Case Components (All internally lubricated components) and: Clutch Master Cylinder; Clutch Release Cylinder; Gears and Shafts; Hoses, Lines and Tubes; Seals and Gaskets; Shift Linkage and Cables; Transfer/Transmission Case; Transmission Mounts; [Shift Lever Knob](#)

## AUTOMATIC TRANSMISSION

Transfer Case Components (All internally lubricated components) and: Hoses, Lines and Tubes; Seals and Gaskets; Shift Linkage and Cables; Solenoids; Torque Converter; Transfer/Transmission Case; Transmission Mounts; Vacuum Modulator; Shift Lever Knob

## AXLE ASSEMBLY

(Front, Rear, Four-wheel and All-wheel Drive): All internally lubricated components and: 4x4 Actuators; Axles and Bearings; Center Support Bearing; Constant Velocity Boot Band; Constant Velocity Joints and Boots; Differential Carrier Assembly; Drive Axle Housing; Drive Shaft; Hubs; Locking Hubs; Seals and Gaskets; Thrust Washers; Universal Joints; Viscous Coupling

## SUSPENSION

(Front and Rear): [Bushings/Bearings](#); [Control Arm Shafts](#); [Electronic Suspension Actuator/Motor and Compressor](#); [Radius Arm](#); [Spindle](#); [Spindle Support](#); [Steering Knuckle](#); [Sway Bar Link](#); [Upper and Lower Ball Joints](#); [Upper and Lower Control Arms](#)

## STEERING

[Gear Box internal components and: Bushings/Bearings](#); [Center Link](#); [Hoses, Lines and Tubes](#); [Idler Arm](#); [Pitman Arm](#); [Power Steering Pump](#); [Power Steering Pump Pulley](#); [Rack and Pinion](#); [Seals and Gaskets](#); [Steering Column](#); [Steering Column Coupling](#); [Steering Column Shaft](#); [Steering Dampener](#); [Steering Gear Box and Pump Housings](#); [Tie Rod End](#)

## FUEL SYSTEM

[Air Flow Meter](#); [Carburetor](#); [Diesel Fuel Injection Pump](#); [Electric Fuel Pump](#); [Electronic Fuel Injection System](#); [Fuel Injectors](#); [Fuel Pressure Regulator](#); [Fuel Pump](#); [Fuel Sending Unit](#); [Fuel Sensors](#); [Fuel Tank](#); [Throttle Body](#)

## COOLING SYSTEM

[Cooling Fan Relay](#); [Cooling Fan Sensor](#); [Engine Cooling Fan Motor](#); [Engine Fan](#); [Engine Fan Clutch](#); [Engine Fan Motor](#); [Engine Fan Shroud](#); [Fan Bracket Subassembly](#); [Radiator](#); [Seals and Gaskets](#)

## AIR CONDITIONING/HEATING

[Air Conditioning Lines and Tubes](#); [Air Conditioning Pressure Switches](#); [Air Temperature Control Programmer](#); [Blower Motor](#); [Blower Motor Resistor](#); [Compressor](#); [Compressor Clutch Assembly](#); [Compressor Pulley](#); [Condenser](#); [Condenser Fan and Motor](#); [Evaporator](#); [Evaporator Temperature Sensor](#); [Expansion Valve](#); [Heater Control Head](#); [Heater Control Valve](#); [Heater Core](#); [Idler Pulley](#); [Pressure Regulator Assembly](#); [Receiver/Dryer](#); [Schrader Valve](#); [Seals and Gaskets](#)

## BRAKES

[Anti-Lock Braking/Traction Control Actuator, Pump and Motor](#); [Brake Booster](#); [Brake Hoses, Lines and Tubes](#); [Disc Brake Calipers](#); [Load-Sensing Proportioning Valve](#); [Master Cylinder](#); [Parking Brake Cable](#); [Proportioning Valve](#); [Seals and Gaskets](#); [Wheel Cylinders](#)



## HYBRID/ALTERNATIVE FUEL

Actuator Assembly Shift Control; Hybrid Vehicle Generator Assembly; Hybrid Vehicle Motor Assembly; Hybrid Vehicle Transaxle Assembly; Transmission Input Damper Assembly; Battery Computer Assembly; Battery Current Sensor; Boost Charging Inlet and Plug-in Electronic Control Unit; Circuit Breaker Sensor; Combination Meter Assembly; Combination Meter Computer; Fuel Cell Water Pump; Fueling Receptacle; Hybrid Vehicle Battery Blower Assembly; Hybrid Vehicle Battery Blower Motor Control; Hybrid Vehicle Battery Thermistor; Hybrid Vehicle Control Computer; Hydrogen Pipes and Manifolds; Inverter Assembly with Converter; Main Switch Assembly; Power Source Control Computer Assembly; Power Steering Electronic Control Unit Assembly; Power Steering Gear Assembly; Pressure Sensors; Reducing Valve; Shift Lever Position Sensor; Skid Control Computer Assembly; Steering Column Assembly; Transmission Control Module

## ELECTRICAL

Alternator; Automatic-Off Headlamp Sensor, Timer and Switches; Automatic Shoulder Belt Motor and Switches; Automatic Temperature Control Unit; Blower Motor; Blower Motor Resistor; Clutch Starter Interlock Switch; Convertible Top Motor; Cruise Control Actuator/Servo; Cruise Control Sensors and Switches; Cruise Control Vacuum Motor; Defogger Relay; Distributor; Engine Cooling Fan Motor; Headlamp Washer; Ignition Coil; Lamp Failure Indicator Sensor; Manually Operated Switches; Power Antenna Motor and Cable; Power Door Lock Actuator; Power Mirror Defogger; Power Mirror Motor; Power Seat Motors; Power Sliding Door Motor; Power Window Motor/Regulator; Retractable Headlamp Motor; Smart Entry and Start System Switch, Sensor and Electronic Control Unit; Starter Motor; Starter Solenoid; Stop Light Switch; Sunroof Motor; Windshield Washer Pump; Wiper Motor





## 24/7 ROADSIDE ASSISTANCE

Drive confidently with 24/7 Roadside Assistance. If the unexpected happens, our VSA will help get you back up and running with:

- Towing to the nearest authorized dealer<sup>3</sup>
- Battery jump starts, flat tire and lockout assistance
- Delivery of up to 3 gallons of fuel, no more than 2 times per month<sup>3</sup>
- Coverage anywhere in the continental U.S. and Canada. Roadside service provided by AAA and its affiliated clubs.

## TRAVEL PROTECTION

If you're unable to drive your Lexus due to the mechanical breakdown of a covered component, substitute transportation and travel protection benefits will provide reimbursements of:

- Up to \$35 per day for car rentals or other substitute transportation.<sup>6</sup> Maximum of 5 days per occurrence.
- Up to \$50 per day for lodging and meals if you're more than 150 miles from home.<sup>6</sup> Maximum of 4 days over the life of your Agreement.



## VEHICLE ELIGIBILITY

### NEW VSA PLANS

Lexus vehicles are eligible if less than 4 years old from date vehicle was first put into service and up to 50,000 total vehicle miles.

### USED VSA PLANS

Lexus vehicles are eligible within current model year plus 9 prior model years and up to 125,000 total vehicle miles. See your dealer for eligibility requirements on non-Lexus vehicles. Used Vehicle Plans available through your Lexus dealer only at the time of used vehicle purchase or lease.



<sup>1</sup>Time and Mileage coverage periods for New Vehicle Plans are measured from date vehicle was first put into service as a new vehicle and zero miles. Time and Mileage coverage periods for Used Vehicle Plans are measured from the Agreement Application Date and Agreement Application Mileage. Coverage expires upon reaching the maximum time or mileage of the coverage period selected, whichever occurs first. See your Agreement for complete terms, conditions, and restrictions.

<sup>2</sup>In California, roadside service provided if vehicle is inoperable due to the mechanical failure of a covered component.

<sup>3</sup>Excludes Fuel Cell and Electric vehicles, which may be towed to the nearest authorized Lexus servicing dealer or authorized fueling station. Fuel delivery will not apply.

<sup>4</sup>Deductible applies to each eligible repair visit. See your Lexus dealer for plan details.

<sup>5</sup>Covered components are subject to change. See your Agreement for complete details.

<sup>6</sup>Valid receipts are required for all reimbursements.

**Purchase of a Vehicle Service Agreement is optional, cancellable (see Agreement terms), and is not required to obtain credit.**

This brochure is intended as a sample of Vehicle Service Agreement coverage. Coverage is subject to exclusions and limitations set forth in the Vehicle Service Agreement. The actual coverage, exclusions, and limitations of the Agreements may vary both from state to state and according to the program features chosen. In certain states, Toyota Motor Services Company administers Vehicle Service Agreements.

In Florida: Toyota Motor Insurance Company  
P.O. Box 9550  
Cedar Rapids, IA 52409  
Florida License #02871



lexusfinancial.com

Lexus Financial Services is a service mark used by Toyota Motor Insurance Services, Inc., and its subsidiary, Toyota Motor Insurance Company.