

presented by **LEXUS FINANCIAL SERVICES**

DRIVE WITH CONFIDENCE KNOWING YOUR VEHICLE IS PROTECTED

Let us help simplify the unexpected events in life. We have crafted a protection plan that conveniently fits your needs and can help insulate you from surprise costs for covered mechanical breakdowns. We know your Lexus is more than just a vehicle and that is why we want to help you protect it. Keep your luxury vehicle protected with a plan built for you.

BENEFITS TO YOU

- Protection after your Lexus warranty expires¹
- Repairs using Lexus-approved parts, performed by factory-trained technicians keeping your Lexus at peak performance
- 24/7 Roadside Assistance²
- Substitute Transportation
- Travel Protection
- Deductible Options³
- Transferable from owner to private party, one time at no additional cost

SERVICE

BY LEXUS

UNRIVALED
CARE.

UNPARALLELED
EXPERTISE.



24/7 ROADSIDE ASSISTANCE⁴

Drive confidently with 24/7 Roadside Assistance.² If the unexpected happens to occur, our VSA will help get you back up and running with:

- Towing to the nearest authorized servicing facility⁵
- Battery jump starts, flat tire and lockout assistance
- Mobile Electric Vehicle Charging (where available)
- Coverage anywhere in the continental U.S. and Canada

Roadside Assistance Services provided by Automobile Association of America (AAA) and its affiliated clubs.

TRAVEL PROTECTION

If you're unable to drive your Lexus due to the mechanical breakdown of a covered component, substitute transportation and travel protection benefits will provide reimbursements of:

- Up to \$50 per day for car rentals or other substitute transportation.⁶ Maximum of 5 days per occurrence.
- Up to \$100 per day for lodging and meals if you're more than 150 miles from home.⁶ Maximum of 5 days over the life of your Agreement.

SMART. SIMPLE. EXCEPTIONAL.
FOR MORE INFORMATION CONTACT YOUR LEXUS DEALER.

presented by **LEXUS FINANCIAL SERVICES**

VEHICLE ELIGIBILITY

NEW VSA PLANS

Lexus vehicles are eligible if less than 4 years old from date vehicle was first put into service and up to 50,000 total vehicle miles.

USED VSA PLANS

Lexus vehicles are eligible within current model year plus 9 prior model years and up to 70,000 total vehicle miles. See your dealer for eligibility requirements on non-Lexus vehicles. Used Vehicle Plans available through your Lexus dealer only at the time of used vehicle purchase or lease.

LEXUS PLATINUM FOR BEV

VSA Platinum for a battery electric vehicle covers the cost of mechanical breakdown of the components listed below after your vehicle's warranty expires.⁷

BEV CONTROL SYSTEM

EV Supply Battery Assembly (If The Battery Capacity Drops Below The 70% Capacity); Vehicle Generator Assembly; Vehicle Motor Assembly; Vehicle Transaxle Assembly; Transmission Input Damper Assembly; Battery Computer Assembly; Battery Current Sensor; Boost Charging Inlet And Plug-In Electronic Control Unit; Combination Meter Assembly; Combination Meter Computer; Vehicle Battery Blower Assembly; Vehicle Battery Blower Motor Control; Vehicle Battery Thermistor; Vehicle Control Computer; Main Switch Assembly; Power Source Control Computer Assembly; Battery Reserve Tank Assembly; Electric Converter Unit Assembly; Electric Converter Unit Assembly; Traction Battery Device Box; Stop Light Switch Assembly; Paddle Shift Switch; Battery State Sensor Assembly

AUTOMATIC TRANSMISSION

Transfer Case Components (All internally lubricated components) and: Hoses, Lines, and Tubes; Seals and Gaskets; Shift Linkage and Cables; Solenoids; Torque Converter; Transfer/Transmission Case; Transmission Mounts; Vacuum Modulator; Shift Lever Knob; Shift Lever Position Sensor; Transmission Control Module; Position Switch; Transmission Floor Shift Assembly; Shift Control ECU; Accelerator Pedal Assembly; Actuator Assembly Shift Control

AXLE ASSEMBLY

Front, Rear, 4WD and AWD eAxle: (All internally lubricated components) and: 4x4 Actuators; Axles and Bearings; Center Support Bearing; Constant Velocity Boot Band; Constant Velocity Joints and Boots; Differential Carrier Assembly; Drive Axle Housing; Drive Shaft; Hubs; Locking Hubs; Seals and Gaskets; Thrust Washers; Universal Joints; Viscous Coupling; Motor Resolver; Electric Motor Speed Reduction Unit; Front EV motor Control Inverter Assembly; MG ECU; Inverter Current Sensor; Vehicle Transaxle Assembly

SUSPENSION

(Front and Rear): Bushings/Bearings; Control Arm Shafts; Electronic Suspension Actuator/Motor and Compressor; Front and Rear Coil Springs; Front and Rear Stabilizer Bar; Front Leading Arm; Front Spring Assembly; Radius Arm; Spindle; Spindle Support; Steering Knuckle; Strut Rod; Suspension Spring Shackles; Sway Bar Link; Torsion Bar Spring; Upper and Lower Ball Joints; Upper and Lower Control Arms; Upper Arm Shaft; Front Stabilizer Link Assembly; Stabilizer Bush; Rear Suspension Support Assembly; Rear Spring Bumper; Rear Shock Absorber Cap; Dust Cover; Coil Spring; Coil Spring Insulator; Cross Section of Rear Upper Control Arm Assembly; Cross Section of Rear Trailing Arm Assembly; Rear Stabilizer Link Assembly; Rear Stabilizer Link Bush; Rear Stabilizer Bar

STEERING

Gear Box internal components and: Bushings/Bearings; Center Link; Horn Contact Ring; Hoses, Lines, and Tubes; Idler Arm; Knuckle Stopper Cover; Pitman Arm; Power Steering Pump; Rack and Pinion; Seals and Gaskets; Steering Column; Steering Column Coupling; Steering Column Shaft; Steering Dampener; Steering Gear Box and Pump Housings; Tie Rod End; Steering Sensor; Power Steering ECU with Motor Assembly; EV Control ECU; Rotation Angle Sensor; Power Steering Motor; Input Shaft; Yoke; Output Shaft; Torsion Bar; Multipole Magnet; Magnetic Convergence Ring Assembly; Power Steering Electronic Control Unit Assembly; Power Steering Gear Assembly; Steering Column Assembly

COOLING SYSTEM

Coolant Level Sensor/Tank; Cooling Fan Relay; Cooling Fan Sensor; Fan Bracket Subassembly; Seals and Gaskets; Motor Cooling Cooler; Radiator Assembly; Inverter Water Pump; Coolant Temperature Sensor; Rear Transaxle Motor Cooling Cooler; Inverter Water Pump; Cooling Fan Motor With Controller; Temperature Sensor; Motor Temperature Sensor

presented by **LEXUS FINANCIAL SERVICES**

AIR CONDITIONING/HEATING

Air Conditioning Heater Box Assembly; Air Conditioning Lines, and Tubes; Air Conditioning Pressure Switches; Air Temperature Control Programmer; Blower Motor; Blower Motor Resistor; Compressor; Condenser; Condenser Fan and Motor; Cooler Control Switch; Damper Servo; Defroster Control Cable; Evaporator; Evaporator Temperature Sensor; Expansion Valve; Heater Control Head; Pressure Regulator Assembly; Receiver/Dryer; Schrader Valve; Seals and Gaskets; Air Conditioning Amplifier Assembly; Compressor With Motor Assembly

BRAKES

Anti-Lock Braking/Traction Control Actuator, Pump and Motor; Brake Booster; Brake Hoses, Lines, and Tubes; Brake Pedal Subassembly; Disc Brake Calipers; Load-Sensing Proportioning Valve; Master Cylinder; Parking Brake Cable; Parking Brake Control Handle Assembly; Parking Brake Lever Subassembly; Parking Brake Pedal Subassembly; Proportioning Valve; Rear Brake Backing Plate; Seals and Gaskets; Wheel Cylinders; Brake Actuator Assembly; Brake Master Cylinder Reservoir Assembly; Linear Solenoid Valve; Gap Hold Valve; Stroke Simulator Cut Valve; Stroke Simulator; Brake Actuator; Servo Pressure Sensor; Stroke Simulator Pressure Sensor; Brake Actuator; Master Cylinder Pressure Sensor; Solenoid Relay; Motor Relay; Pressure Holding Solenoid Valve; Pressure Reduction Solenoid Valve; Speed Sensor; Steering Sensor; Stop Light Switch Assembly; Electric Parking Brake Switch Assembly; Brake Pedal Stroke Sensor Assembly; Brake Actuator Assembly

ELECTRICAL

Automatic-Off Headlamp Sensor, Timer and Switches; Automatic Shoulder Belt Motor and Switches; Automatic Temperature Control Unit; Blower Motor; Blower Motor Resistor; Charge Warning Relay; Convertible Top Motor; Cruise Control Actuator/Servo; Cruise Control Sensors and Switches; Cruise Control Vacuum Motor; Defogger Relay; Door Control Relay; Engine Coolant Temperature Gauge and Sending Unit; Guide Rail Limit Switch; Headlamp Washer; Headlight Control Relay; Horn; Horn (for theft deterrent); Integration Relay; Lamp Failure Indicator Sensor; Lock Cylinder Set; Main Relay; Manually Operated Switches; Power Antenna Motor and Cable; Power Door Lock Actuator; Power Mirror Defogger; Power Mirror Motor; Power Seat Motors; Power Sliding Door Motor; Power Window Motor/Regulator; Rear Shock Absorber Control Actuator; Retractable Headlamp Motor; Shoulder Belt Drive Motor; Smart Entry and Start System Switch, Sensor and Electronic Control Unit; Speedometer; Stop Light Switch; Sunroof Cables; Sunroof Motor; Taillight Control Relay; Turn Signal Flasher; Unlock Warning Buzzer; Windshield Washer Pump; Windshield Wiper Link Assembly; Wiper Control Relay; Wiper Motor; Wiring Harnesses; Circuit Breaker Sensor

COMPUTERS AND ELECTRONICS

Airbags; Airbag Sensors; Antenna Cord; Anti-Lock Braking/Traction Control Computer and Sensors; Automatic Shoulder Belt Computer; Body Control Module; Circuit Opening Relay; Compact Disc (CD) Player; Cruise Control Computer; Electronic Ignition Unit; Electronically Controlled Transmission/Transfer Case Computer and Sensors; Electronically Modulated Suspension Computer; Front Seat Airbag Assembly; Graphic Equalizer; Knock Sensor; Navigation System; Power Mirror Electronic Control Unit; Power Seat Computer; Progressive Power Steering Computer; Radio Tuner; Steering Sensor; Stereo Component Amplifier; Sunroof Control Computer and Relay; Tape Player; Tilt/Telescoping Steering Computer; Traction Control Computer; Trip Computer; Variable Induction System; Vehicle Security Computers and Sensor; Wiper Module; Combination Meter Assembly; Airbag ECU Assembly; Skid Control Computer Assembly; Skid Control ECU

ADDITIONAL COMPONENTS

Accelerator Pedal and/or Bracket Subassembly; Accelerator Pedal Rod Assembly; Back Door Lock Assembly; Convertible Roof Hook; Door Handles; Door Lock Cylinder; Front and Rear Door Lock Assembly; Front Seat Belt; Glove Compartment Door Lock Cylinder; Glove Compartment Door Latch Subassembly; Hinges; Hood Lock Assembly; Hood Lock Control Cable Assembly; Hood Support Assembly; Rear Seat Belt; Reclining Seat Back Adjuster; Removable Roof Lock Handle; Seat Track Assembly; Shoulder Belt Guide Rail Assembly; Sliding Roof Drive Cable; Sliding Roof Guide Rail; Tail Gate Lock Assembly; Tilt Roof Lock Handle Assembly

THESE ARE THE ITEMS NOT COVERED

Auxiliary Batteries; Body Panels; Brake Linings, Pads and Shoes, Rotors and Drums; Bumpers; Carpet; Chrome; Dash Cover and Pad; Door Fabric; Door Trim; Filters; Fluids; Glass (including Windshields); Headliner; Lines and Tubes; Interior and Exterior Trim and Moldings (including but not limited to: Ash Trays, Covers, Cup Holders and Vents); Lamps, Light Assemblies/ Housings; Nuts, Bolts, Clips, Retainers, and Fasteners; Paint; Rust and Corrosion Damage; Seat Covers; Sheet Metals; Shiny Metals; Structural Framework and Welds; Tires; Lines and Tubes; Weather Stripping; Wheels and Rims; Windshield Wiper Blades (Rubber Component); All interior and exterior cloth, leather, and stitching including convertible tops and/or vinyl tops including but not limited to: any vibration, deterioration, discoloration, disfigurement, warping, fading, staining, stretching, ripping, punctures, tearing, and/ or scratches.

presented by **LEXUS FINANCIAL SERVICES**

VSA WEARABLE COMPONENT

HEADLAMP BULBS

Unlimited replacement of Lamps, and Light Bulbs (excludes Light Assemblies/Housings, and LEDs).
Impact damage is not covered.

BELTS AND HOSES

One replacement of each of the following engine belt and hose: vacuum pump belt, serpentine belt, alternator belt, air pump belt, air conditioner belt, water pump belt, heater hose, bypass hose, throttle body hose, upper and lower radiator hoses, air conditioning hose, air hose, washer hoses, vacuum hoses, and fuel hoses.

ELECTRICAL

Unlimited coverage of fuses, interior and exterior light bulbs including but not limited to: turn signal bulbs, engine compartment lights, running lights, stop lights, backup lights, license plate lights, parking lights, trunk light, dome light, courtesy light, visor light, map light, and glove box light (excludes Light Assemblies/Housings, and LEDs). Impact damage is not covered.

INCLUDE EXCLUSION:

Covered components are subject to change. Please refer to your agreement for specific coverage details, including limitations and exclusions.

Bulbs, fuses, headlamps, belts, hoses, and LED light replacement have some limitations. Please refer to your agreement for complete details.

1. Time and Mileage coverage periods for New Vehicle Plans are measured from date vehicle was first put into service as a new vehicle and zero miles. Time and Mileage coverage periods for Used Vehicle Plans are measured from the Agreement Application Date and Agreement Application Mileage. Coverage expires upon reaching the maximum time or mileage of the coverage period selected, whichever occurs first. See your Agreement for complete terms, conditions, and restrictions.
2. In California, roadside service provided if vehicle is inoperable due to the mechanical failure of a covered component.
3. Deductible applies to each eligible repair visit. See your Lexus dealer for plan details.
4. Certain Lexus vehicles may already include a 24/7 Roadside Assistance program depending on your vehicle's SafetyConnect features. If a vehicle already has 24/7 roadside assistance, no additional roadside assistance benefit will be provided with the purchase of a Vehicle Service Agreement. Please check with your dealer for details.
5. Excludes Fuel Cell and Electric vehicles, which may be towed to the nearest authorized Lexus servicing dealer or authorized fueling station. Fuel delivery will not apply.
6. Valid receipts are required for all reimbursements.
7. Covered components are subject to change. See your Agreement for complete details.

THE PURCHASE OF A VEHICLE SERVICE AGREEMENT VOLUNTARY PROTECTION PRODUCT IS OPTIONAL, CANCELABLE (SUBJECT TO SPECIFIC AGREEMENT TERMS), AND NOT REQUIRED TO OBTAIN CREDIT.

This brochure is intended as an outline of Vehicle Service Agreement coverage. Coverage is subject to exclusions and limitations set forth in the Vehicle Service Agreement. The actual coverage, exclusions, and limitations of the agreements issued to customers may vary both from state to state and according to the program features chosen by the customer. In certain states, Toyota Motor Services Company administers Vehicle Service Agreements. Vehicle Service Agreements are available through Toyota Financial Services at participating Toyota dealerships only. Not available in select states.

In Florida, the administrator is Toyota Motor Insurance Company, P.O. BOX 661012, Dallas, TX, 75265, Florida License #02871

©2026 Toyota Motor Credit Corporation d/b/a Lexus Financial Services. All rights reserved.
21021D (04/26)